



Want to see what we're up to?
Check us out @duraseinsolidsurface
or durasein.com/ca

Durasein
Bowl Mounting

Durasein

Fabrication and Installation

Bowl Mounting

BULLETIN NO.
Bowl Mounting_0426


TECH INFO
Bowl Mounting

Page
01/04

Introduction

In this bulletin, methods are provided for mounting sinks and lavatories to a Durasein® solid surface countertop. The typical methods are 'hard' seam and 'soft' seam. These two methods are used in mounting the following types of bowls:

- Seamed Undermount
- Stainless Steel Undermount
- Undermount Generic
- Cast Iron Undermount Top Mount
- Vessel

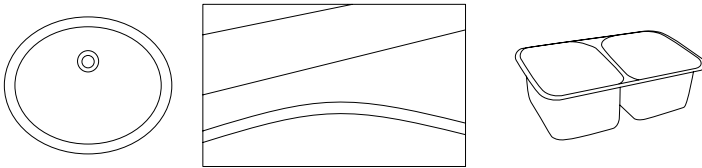

'Hard' Seam Undermount Installation

Seaming a solid surface bowl to the underside of a Durasein® solid surface countertop

Positioning


- Turn the Durasein® solid surface sheet back-side up on a well-supported surface. Position the bowl on the sheet. Be sure to allow for the front rail of the cabinet and for plumbing considerations.
- Draw a pencil line on the sheet around the perimeter of the bowl (or clamp provided template into position) while the sheet is positioned back-side up. Drill a 1" - 2" (25 - 50 mm) pilot hole, with a hole-saw or plunge router, in the sheet in line with the drain hole of the bowl.
- Mark the location for 4 positioning blocks as shown. These blocks can be scrap pieces of wood or solid surface approximately 1"x 1 1/2" x 1/2" (25 mm x 38 mm x 13 mm) thick.
- Fasten the blocks to the back of the sheet using hot melt adhesive or other suitable adhesive. Leave a slight gap between the block and the sink to allow the sink to be placed without scraping the block.
- Clean and, if necessary, sand the underside of the sheet where the bowl is to be bonded. This removes factory

sanding lines or scuff marks.

- Clean and, if necessary, sand the top flange of the bowl.
Do not round over or nick the inside edge of the rim.


Bonding

Remove the bowl and clean the sheet bonding area and the bowl flange with denatured alcohol. Apply Durasein Surfacing Adhesive to the bowl flange. Apply carefully and use a healthy bead of adhesive to assure 100% coverage. (Refer to Approved Solvents for Surface Preparation of Durasein Solid Surface During Fabrication)

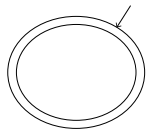


Clamping

There are several different methods when it comes to clamping the bowl or sink in place. A few common methods are:

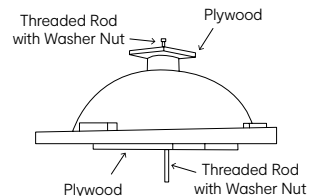


Use an all-thread rod, two blocks of plywood, and a wing nut to clamp the bowl to the sheet. Tighten the clamp until the seam adhesive squeezes out evenly. Allow the seam adhesive to harden.

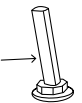

A similar clamp can also be constructed using standard pipe clamp hardware or sliding bar clamp. Do not over tighten. This will starve the seam of adhesive which can lead to seam failure. It could also build stress into the bowl. Use only hand pressure to tighten the clamp.



Bags of sand or a very dense granular material can be placed on top of the drain thus providing an even force on the bowl flange. Be sure the sheet is properly supported so it will not bow or flex thus not allowing the bowl to properly seat.

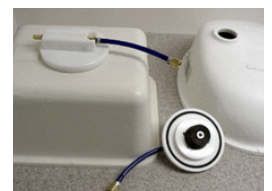

Deep jawed clamps such as mechanics' vice-grip pliers can be strategically placed around the perimeter of the bowl flange.


Vacuum plug clamping system

- A specially designed vacuum plug is installed in the drain hole after the bowl with adhesive has been positioned.
- The vacuum is created by either a vacuum pump or a venturi built into the unit.
- This method is performed prior to drilling with the hole saw into the sheet.

Note: Whatever clamping method used, always keep in mind the amount of labor involved and do everything possible to minimize your labor costs.

Shaping the Edge

Turn the top over and cut the sheet material from the center of the bowl area with a special flush-cut router bit with an oversized nylon bearing. Start from the pilot hole and rout clockwise around the bowl. Hold the cutout steady as it separates from the top to avoid damage to the edge. Select the desired bowl profile bit and rout clockwise around the bowl. Sand to the desired finish.

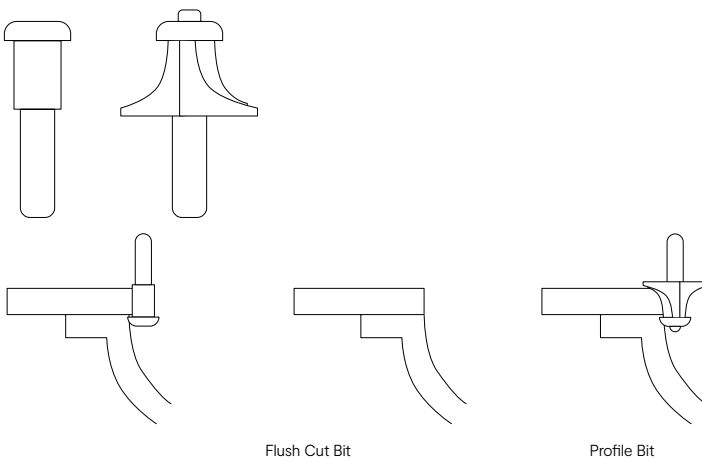

Flush Cut with
Oversized Bearing

Flush Cut
Showing Overhang

Profile Bit Cut

'Soft' Seam Undermount Installation

Stainless Steel Undermount Generic Undermount Cast Iron Undermount


Joining an undermount bowl to the underside of a Durasein® solid surface countertop

Undermount bowls follow generally the same process as the 'hard' seam undermount bowl with the following exceptions:

1. The bowl is usually a different material than the countertop.
2. The cutout needs to be cut and finished prior to the installation of the bowl.
3. The cutout needs to be sanded to the same finish as the countertop.
4. The cutout sometimes has a routed profile.
5. The bowl utilizes a flexible adhesive such as 100% silicone adhesive to bond the bowl to the countertop. (Allow silicone adhesive to cure overnight prior to installing the countertop or installing the plumbing) connections.
6. Mechanical fasteners are used to clamp the bowl to the top


Positioning

- Lay out the position of the bowl on the sheet. Be sure to allow for the front rail of the cabinet and for plumbing considerations. This step can be done with either side of the sheet facing up.
- Cut the bowl opening using a router and template, CNC router or other appropriate routing machinery.
- Profile the finished cutout with appropriate router bit. Be sure the top and bottom edges of the cutout are sanded smooth to eliminate stress risers and to achieve the desired aesthetic.

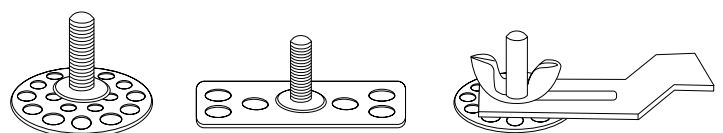

- Turn the solid surface sheet back-side up on a well-supported surface. Position the bowl on the sheet. Layout the locations for appropriate mechanical fasteners. Positioning blocks, if desired, can also be put in place at this time.


Typical Fasteners

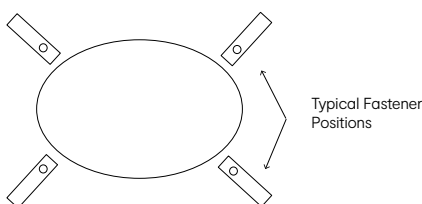

Fasteners with threaded post Fastener showing clip and wing nut


Mechanical fasteners are recommended for undermounting most bowls to a Durasein® solid surface top. The most common method is to adhere a device to the top using Durasein® Surfacing Adhesive seam adhesive or another appropriate type of adhesive engineered specifically for this purpose. Then a fastening clip is connected to the device.

The following drawings show typical locations for mechanical fasteners

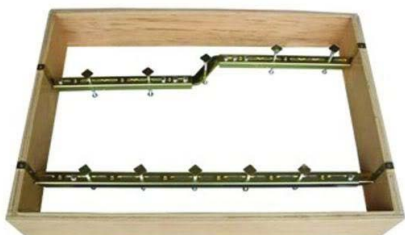

Cast iron Undermount bowls are very heavy and require additional support. There are several styles of support bars or cradles on the market. When installed properly, these devices support the weight of the bowl and water when in use.

Example of Sink Cradle Support

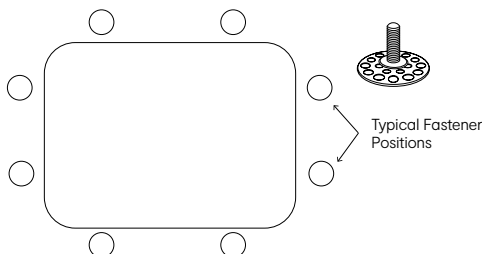


Bonding

- Remove the bowl and clean the sheet bonding area and the bowl flange with denatured alcohol and a clean, white cloth. Allow to dry.
- Install the mechanical fasteners using Durasein® Surfacing Adhesive seam adhesive or an appropriate adhesive engineered specifically for this purpose. Allow to cure completely.
- Use 100% silicone adhesive to bond the bowl to the countertop. Apply carefully and use a healthy bead of adhesive to assure optimal coverage.
- Put the bowl in place on the countertop being sure the reveal is uniform around the perimeter of the bowl.
- Install the fastening clips and tighten. Clean any unwanted adhesive squeeze-out on the inside of the bowl.

Top Mount Installation


Joining a Top Mount Bowl to a Durasein® solid surface countertop

Most top mount sinks are simply adhered in place with 100% silicone flexible adhesive or clamped using a fastening system supplied by the manufacturer. Always follow the manufacturer's instructions.

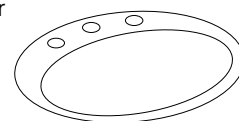

Positioning

- Lay out the position of the bowl on the sheet. Be sure to allow for the front rail of the cabinet and for plumbing considerations. This step can be done with either side of the sheet facing up. When available, use the manufacturer's template for laying out the cutout.
- Cut the bowl opening using a router and template, CNC router or other appropriate routing machinery. Do not use a jigsaw.
- Be sure the top and bottom edges of the cutout are sanded smooth to eliminate stress risers.

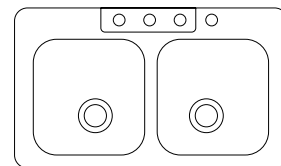


Bonding

- Clean the sheet bonding area and the bowl flange with denatured alcohol and a clean, white cloth. Allow to dry.
- Follow the sink manufacturer's instructions for installation.
- Use 100% silicone adhesive to bond the bowl to the countertop. Apply carefully and use a healthy bead of adhesive to assure optimal coverage.
- Put the bowl in place on the countertop being sure the position is uniform around the perimeter of the bowl.
- If required, install the fastening clips and tighten. Clean any unwanted adhesive squeeze-out.

Vessel Bowl

Joining a Vessel Bowl on a Durasein® top

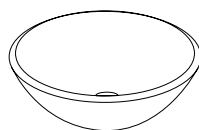

Positioning

- Lay out the position of the bowl on the sheet. Be sure to allow for the front rail of the cabinet and for plumbing considerations. This step can be done with either side of the sheet facing up. When available, use the manufacturer's template for laying out the cutout.
- Cut the tailpiece opening using a hole saw or router and template. Do not use spade bits or auger bits.
- Be sure the top and bottom edges of the cutout are sanded smooth to eliminate stress risers.

Disclaimer:


Only fabricators experienced with the techniques, methods and equipment described in this fabrication bulletin should perform thermoforming. Durasein cannot regulate or control the adherence by a fabricator to the methods recommended in this fabrication bulletin. Therefore, Durasein does not warrant the condition of Durasein® solid surface while being thermoformed or material that has been unsuccessfully thermoformed.

Durasein reserves the right to make changes to this information and to this disclaimer. This information provided by Durasein is based on technical data and experience with Durasein® solid surface products and is intended for use by persons having technical skill and at their own risk and discretion. Durasein does not warrant this information is absolutely current and accurate and assumes no liability for accuracy, completeness, or usefulness of any information. No representation or warranties, express or implied with respect to this information, including any warranties of title, non-infringement of copyright or patent rights of others, merchantability, or fitness or suitability for any purpose are made by Durasein as conditions of use are not within the control of Durasein. This information should not be relied upon for creating specifications, designs, or installation guidelines. The persons responsible for use and handling of products are responsible for ensuring the design, fabrication, or installation methods present no safety or health hazards. Durasein does not have liability and assumes no liability for the use of results obtained from such information, whether or not information is based on negligence by Durasein. Durasein shall not be liable for (i) any damages, including claims relating to the specification, design, fabrication, installation, or combination of this product with any other product(s), and (ii) special, direct, indirect, or consequential damages. Nothing herein is to be taken as a license to infringe or a recommendation to operate under any patents. Use or access of this information shall be deemed your acceptance of this disclaimer and any changes.

Copyright © 2026 Durasein. Durasein® is a registered trademark. All rights reserved.

Bonding

- Clean the sheet bonding area and the bowl base with denatured alcohol and a clean, white cloth. Allow to dry.
- Follow the sink manufacturer's instructions for installation.
- Use 100% silicone adhesive to bond the bowl to the countertop. Apply carefully and use a healthy bead of adhesive to assure optimal coverage.
- Put the bowl in place on the countertop being sure the position is uniform around the perimeter of the bowl.
- Install the drain and tailpiece hardware and tighten. Clean any unwanted adhesive squeeze-out.

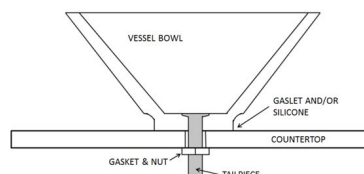

Helpful Hints: Always make bowl cutouts using a router. Always sand smooth the top and bottom edges of any cutouts. Support cast iron sinks with a mechanical support. Use only Durasein® Surfacing Adhesive for adhering undermount solid surface bowls.

Referenced Documents Approved Solvents for Surface Preparation of Durasein® Solid Surface During Fabrication (Thermo_0323)